


## Mirror MacBook display to Samsung TV

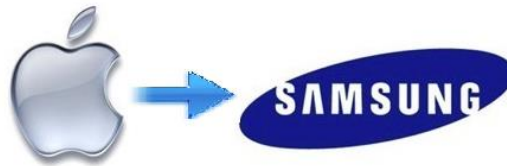


1. Connect to the "eduroam" wifi
2. Screen mirroring



3. Select TV from the list that appears (they are named by room number.)  
(Kutatószoza01,Kutatószoza02,..stb.)
4. Enter the TV pairing code on your laptop  
(only requested on 1st connection)
5. Changing projection settings  
(Full screen, volume settings, etc.) \*\*

≡ *Others menu/ Tap on the "How to use" button to display on the help screen, which gives a detailed description of the menu items on the drawing board.*

You can write on the interactive display by touching on the  icon after selecting Pen or Brush mode.

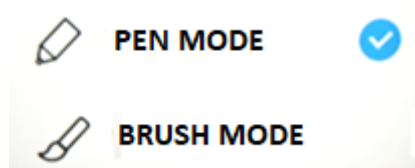


The pen mode can **only** be used with the TV's own special physical pen device!


Brush mode touching the TV with your finger


## Show Windows screen on Samsung TV



1. Connect to the "eduroam" wifi
2.  + **K** key combination displays the list of TVs that can be selected.
3. Select TV from the list that appears (they are named by room number.)  
(Kutatószoza01,Kutatószoza02,..stb.)
4. In the pop-up window on the TV, enable the laptop connection request.
5. Changing projection settings  
(Full screen, volume settings, etc.) \*\*

☰ *Others menu/ Tap on the "How to use" button to display on the help screen, which gives a detailed description of the menu items on the drawing board.*

You can write on the interactive display by touching on the  icon after selecting Pen or Brush mode.

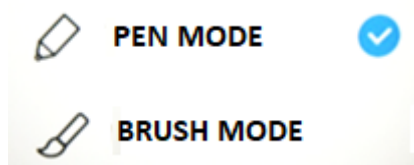

The pen mode can **only** be used with the TV's own special physical pen device!


Brush mode touching the TV with your finger


## Show Android screen on Samsung TV



2. Connect to the "eduroam" wifi
3. Choose the phone's mirroring function (Screen Mirroring/ MirrorShare)
4. Select TV from the list that appears (they are named by room number.)  
(Kutatószoza01,Kutatószoza02,..stb.)
5. In the pop-up window on the TV, enable the phone connection request.
6. Changing projection settings  
(Full screen, volume settings, etc.) \*\*

≡ *Others menu/ Tap on the "How to use" button to display on the help screen, which gives a detailed description of the menu items on the drawing board.*


You can write on the interactive display by touching on the  icon after selecting Pen or Brush mode.

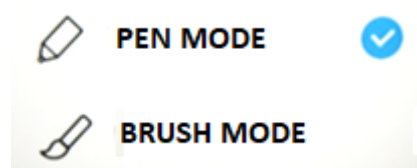







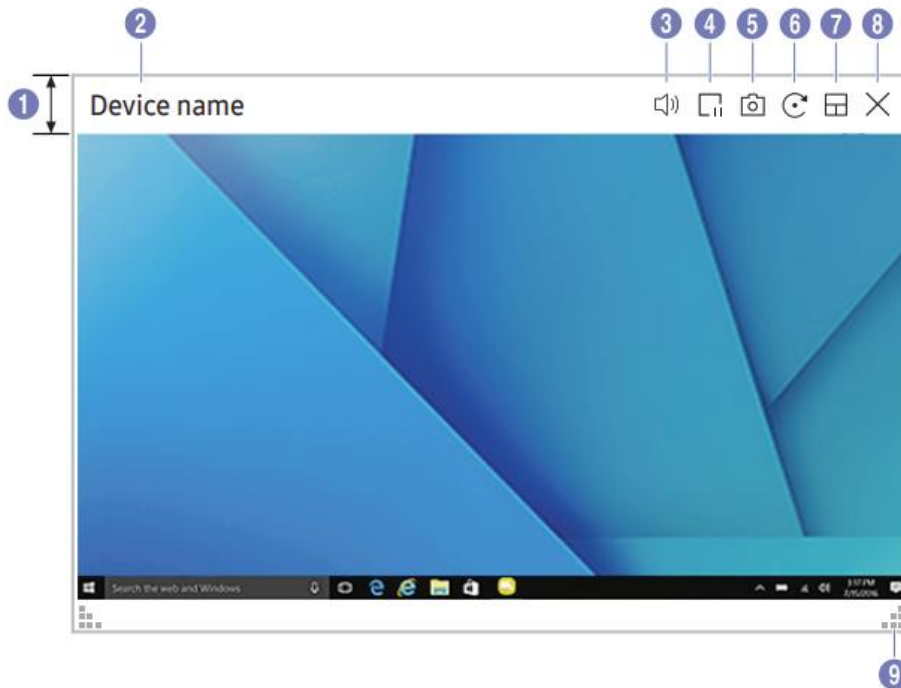





The pen mode can **only** be used with the TV's own special physical pen device!

Brush mode touching the TV with your finger


## \*\*Set source window properties



When you connect a PC or a mobile device to the product, the source window appears.

Parts	Description
1 Menu bar	Drag the source window to move to the desired position.
2 Device name	Displays the name of the connected device.
3 	Adjust the volume.
4 	Pause the input screen display.
5 	Capture the source window.  This feature is not available when <b>PIP Capture</b> is set to <b>Off</b> .
6 	Rotate the source window.  This function is supported only on Android 8.0 Oreo version or later of Samsung mobile devices.
7 	Change the input screen position or view it on full screen. <ul style="list-style-type: none"> <li></li> </ul>  When the product is in portrait orientation, the full screen mode is supported only on the Android 8.0 Oreo version or later of Samsung mobile devices.  The icon images are for position reference only. The size of the screen may differ from what is shown.
8 	Close the viewer.
9 	Adjust the size of the source window.

## MacBook képernyő kivetítése Samsung TV-re

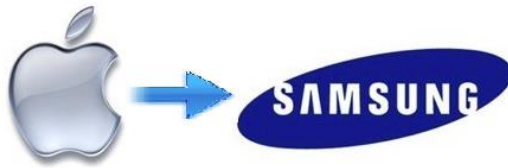


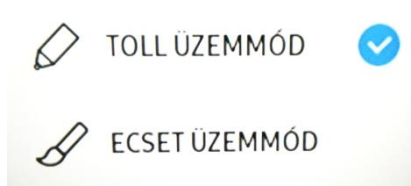
1. Csatlakozás „eduroam” wifi lehetőséghez
2. Képernyő tükrözés



3. A megjelenő listában TV kiválasztása  
(Kutatószoza01,Kutatószoza02,..stb.)
4. TV-n megjelenő párosító kód beírása a laptopon  
(1. csatlakozáskor kéri, következő alkalommal már nem)
5. Kivetített kép tulajdonságainak beállítása  
(Teljes képernyő, hangerő beállítás, stb.) \*\*

≡ *Egyebek menü/ A használat menü pont alatt előhívhatja a súgó megjelenítését, mely részletesen bemutatja a rajztábla menüpontjait.*

A rajztáblára írni a  ikonra kattintva a Toll vagy Ecset üzemmód kiválasztása után lehetséges.




A toll üzemmódot **kizárólag** a TV saját fizikai toll eszközével tudja használni!


Ecset üzemmód a tv ujjal való érintése


## Windows képernyő kivetítése Samsung TV-re



1. Csatlakozás „eduroam” wifi lehetőséghez
2.  + K billentyűkombináció megjeleníti a kiválasztható TV-k listáját
3. A megjelenő listában TV kiválasztása  
(Kutatószoza01,Kutatószoza02,..stb.)
4. A TV-n felugró ablakban engedélyezni kell a laptop csatlakozását.
5. Kivetített kép tulajdonságainak beállítása  
(Teljes képernyő, hangerő beállítás, stb.) \*\*

☰ *Egyebek menü/ A használat menete menüpont alatt előhívhatja a sűgő megjelenítését, mely részletesen bemutatja a rajztábla menüpontjait.*

A rajztáblára írni a  ikonra kattintva a Toll vagy Ecset üzemmód kiválasztása után lehetséges.

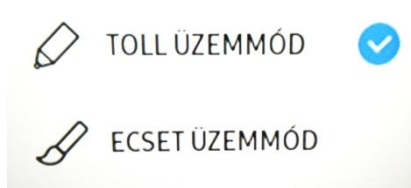

A toll üzemmódot kizárólag a TV saját fizikai toll eszközével tudja használni!


Ecset üzemmód a tv ujjal való érintése


## Android eszköz kijelzőjének kivetítése Samsung TV-re



1. Csatlakozás „eduroam” wifi lehetőséghez
2. A telefon képernyő tükrözés funkcióját elindítva (Screen Mirroring/ MirrorShare/ Vetítés) ki kell választani a szoba nevével megegyező nevű TV-t. (Kutatószoba01, Kutatószoba02, ...stb.)
3. A TV-n felugró ablakban engedélyezni kell a telefon csatlakozását.
4. Kivetített kép tulajdonságainak beállítása (Teljes képernyő, hangerő beállítás, stb.) \*\*

☰ *Egyebek menü/ A használat menete menüpont alatt előhívhatja a súgó megjelenítését, mely részletesen bemutatja a rajztábla menüpontjait.*

A rajztáblára írni a  ikonra kattintva a Toll vagy Ecset üzemmód kiválasztása után lehetséges.

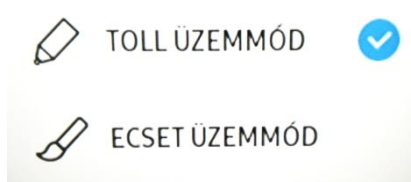









A toll üzemmódot **kizárólag** a TV saját fizikai toll eszközével tudja használni!

Ecset üzemmód a tv ujjal való érintése

## \*\*Kivetített kép tulajdonságainak beállítása



Amikor számítógépet vagy mobilkészítőt csatlakoztat a készülékhez, megjelenik a forrásablak.

Részek	Leírás
1 Menüsor	A forrásablakot húzással helyezheti a kívánt pozícióba.
2 Eszköz neve	Megjeleníti a csatlakoztatott eszköz nevét.
3 	Állítsa be a hangerőt.
4 	A bemeneti képernyő kijelzésének szüneteltetése.
5 	A forrásablak mentése. <i>Ez a funkció nem érhető el, ha a PIP-felvétel beállítása Ki.</i>
6 	A forrásablak elforgatása. <i>Ez a funkció csak Android 8.0 Oreo vagy újabb verziójú Samsung mobilkészítőkön támogatott.</i>
7 	Módosítsa a beviteli képernyő pozícióját vagy tekintse meg teljes képernyőn. <ul style="list-style-type: none"> <li></li> </ul> <i>Ha a készülék álló tájolású, akkor a teljes képernyős mód csak Android 8.0 Oreo vagy újabb verziójú Samsung mobilkészítőkkel támogatott.</i> <i>Az ikon ábrák csak tájékoztató jellegűek. A képernyő mérete eltérhet a láthatótól.</i>
8 	A megjelenítő bezárása.
9 	A forrásablak méretének beállítása.